

## FITTING INFORMATION FOR THE MINERAL OIL WARNING LIGHT DELAY UNIT (RH13412P)

- 1. Locate the wire coming from the reservoir level sensors (that goes to the warning light cluster) and cut the wire as you can see on the diagram below.
- 2. Fit the male terminal on the delay unit to the wire going to the dash and the female terminal to the wire going to the reservoir.

