

UR16730NFP 15 PSI Pressure Relief Valve Fitting Order



← **Top Plate Gasket**



← **Pressure Valve (fit rubber seal down)**



← **Valve Centralising seat (fitted into header tank recess)**