

INSTRUCTIONS FOR FUEL TANK SENDER UNIT RF9227P

Please find enclosed fuel tank level sender RF9227P and a spare arm to convert the sender to RF5410P.

Two types of tank were fitted to MkVI and R Type cars each using the same electrical sender for the gauge. The tanks were, however, different internally meaning that the float arms are a different shape.

By looking at the tank externally it is not easy to decide which arm is required.

We therefore supply our senders with the correct arm for the later tanks – RF9227, but we also supply a spare arm in order for you to convert your sender should your car be fitted with the earlier tank which requires sender RF5410.

Further information is available in the Technical section on the kda132 website:
www.kda132.com/pdfs/technical/fuel/Fuel-Level-Sender.pdf