


Flying Spares

INSTRUCTIONS FOR THE THERMAL RESETTING FUSE (RH9939)

Procedure

- 1.) Bring the motor car into the workshop and fit a wing cover to the near side front wing.
- 2.) Disconnect the thermal fuse (UD 21300) and remove from the motor car.
- 3.) Fit the new self resetting thermal fuse (RH 9939) in the same position as the original fuse.
- 4.) Cut off the original 3 way thermal fuse connecting plug.
- 5.) Terminate the 3 wires individually with Pozilok Lucars (UD 22512) and sleeves (UD 22513).
- 6.) Connect the newly terminated connections to the self resetting thermal fuse as shown below.

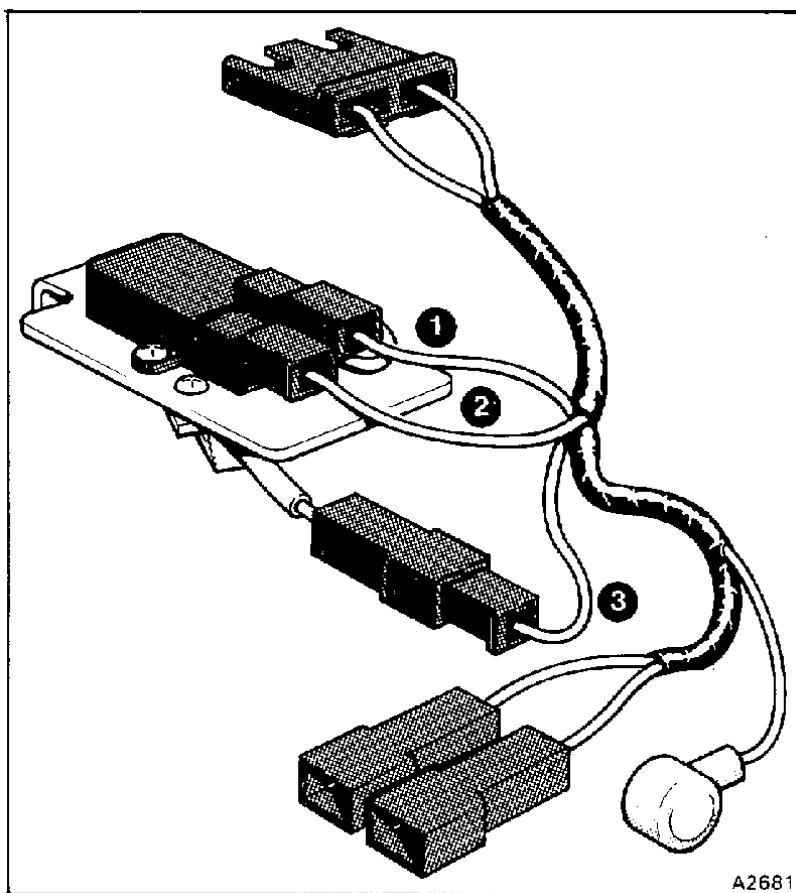

1	Blue
2	Blue/Yellow
3	Purple