



## INSTRUCTION SHEET FOR UE46044P (UE46044PINS)

This is the original fitting and wiring diagram

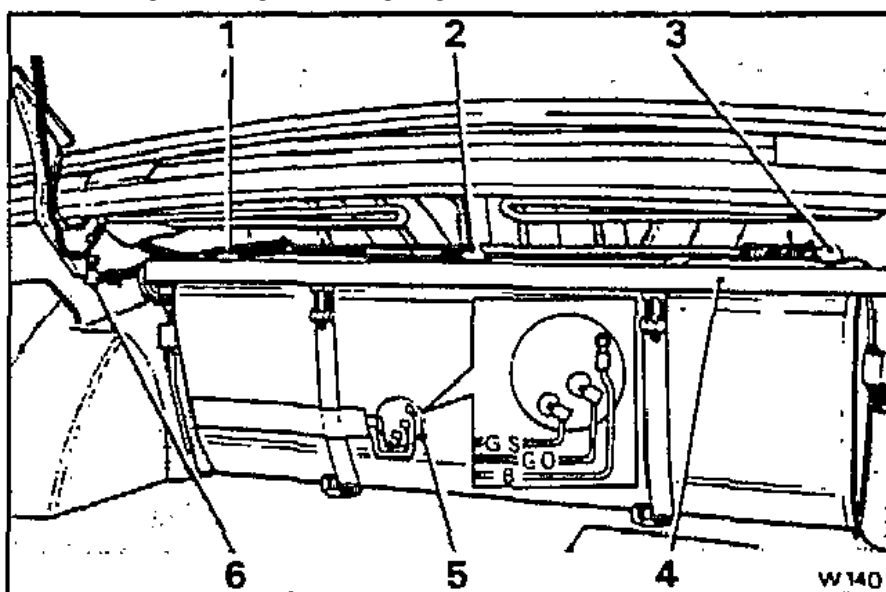

This diagram can be found on TSD4400 Silver Spirit Workshop Manual in section K2-1

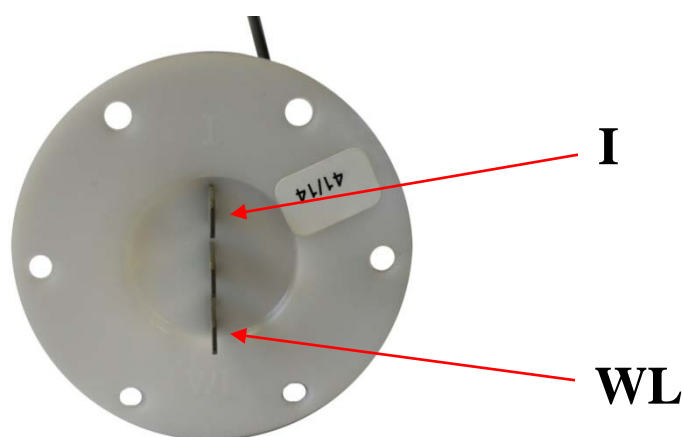

Put the Green/Slate wire to the 'I' terminal (top of gauge)  
Put the Green/Orange wire to the 'WL' terminal (bottom of gauge)  
And the black wire to earth