

Worldwide suppliers of quality Rolls-Royce & Bentley parts since 1995


Fitting Instructions for UD4181P / RH8312P For Early Rolls-Royce Silver Shadow & Bentley T Type models

We supply an alternative push-button starter switch which has only three connections. However, there were three variations of how the starter switch was installed on the Rolls-Royce Silver Shadow and Bentley T Type.

The three variations are:

- 1 - Very early models with no ballast resistor in front of the ignition coil used UD4181 with 3 connectors.
- 2 - Early Shadows with ballast resistor had UD13627 with 4 connectors.
- 3 - Later models used RH8312 which had no push button facility for manual starting.

If your car has the original switch with 4 connectors, please fit the diode supplied between the large Lucar terminal at the switch and the WG-P cable.

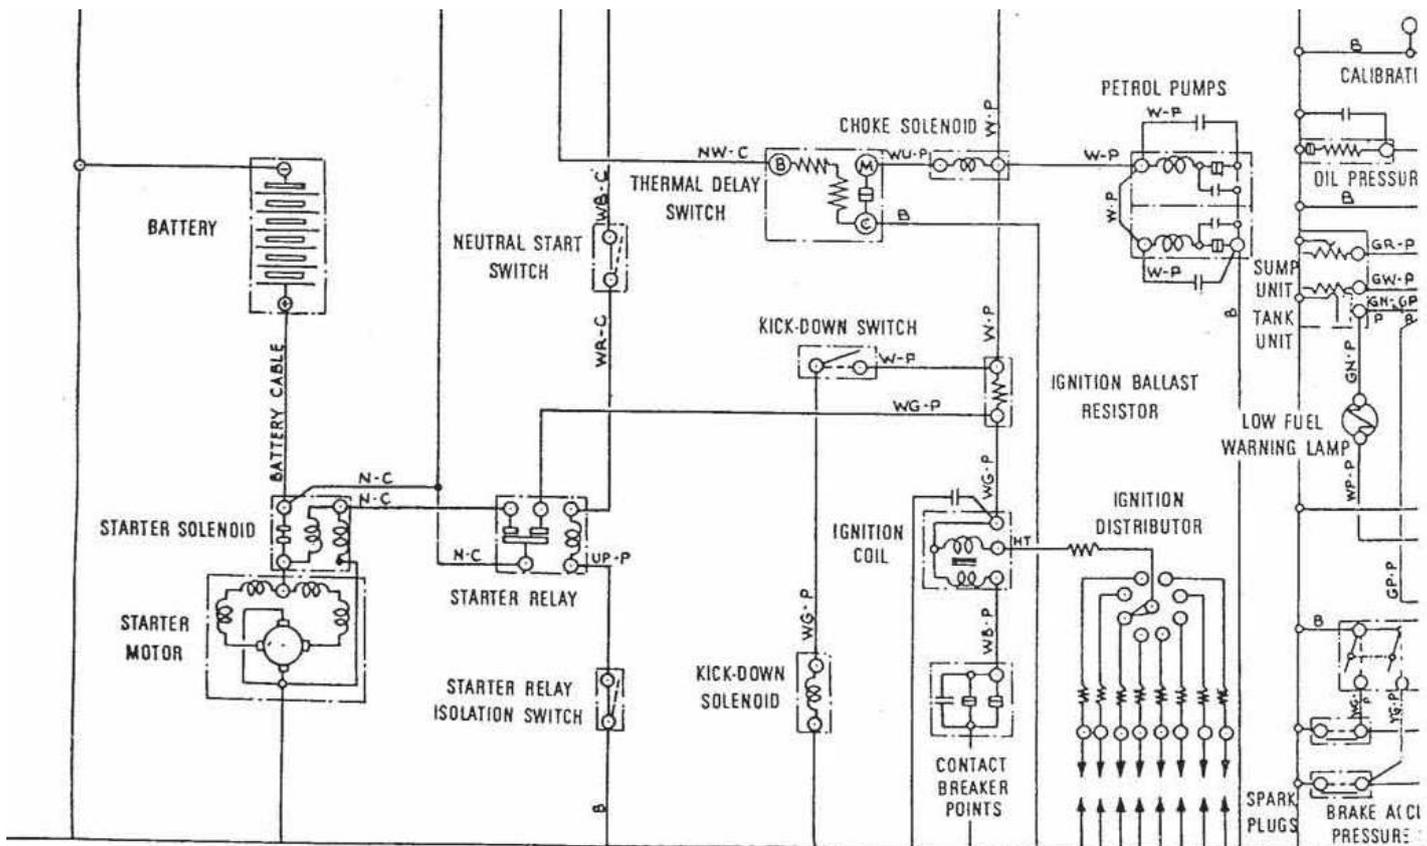

Note - this diagram can be found in the Shadow I Workshop Manual (TSD2476)

Visit our website - www.flyingsparses.com

☎ 01455 292949 📠 01455 292959 ✉ sales@flyingsparses.co.uk