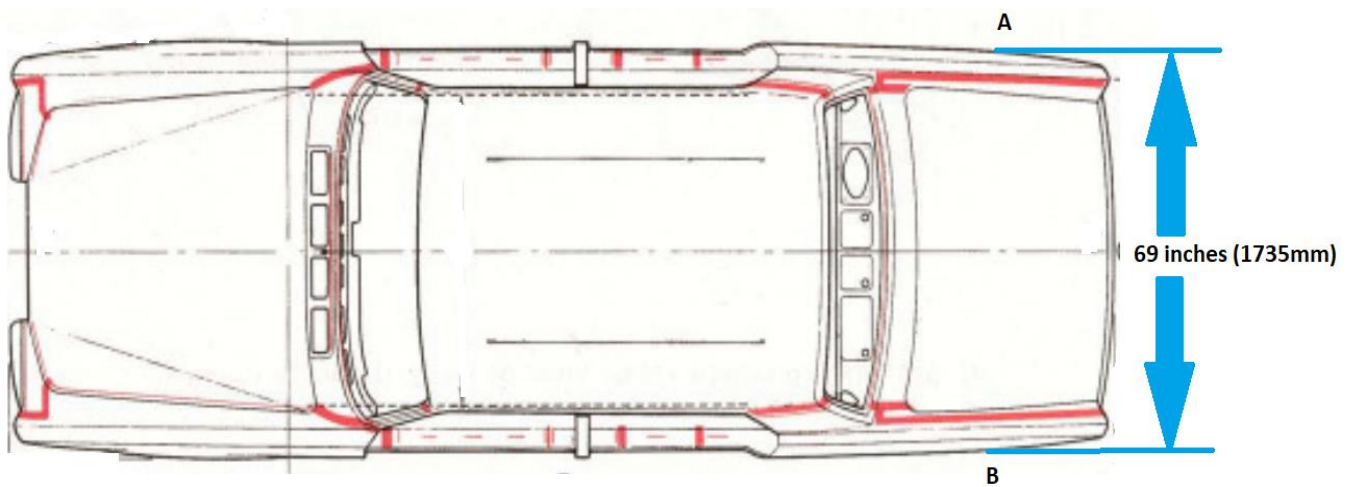


# Flying Spares

## UR15225P installation guide.



**Fig 1**

Before installing the UR15225P rear bumper please follow the below guidance:

**Take care as the bumper is highly polished so the pre-assembly should be done on a soft surface to prevent marks.**

Pre-assemble the bumper off the car so that the inside edges of the tip of quarter bumpers have a gap of 69 inches (1735mm), see above Fig 1.

When attaching the overrides please make sure that the rubber seals that have been provided are cut to the correct length and fitted to the edge of the overrides before offering up the overrides to the bumper otherwise the bumper blade will be scratched.

Once the bumper has been pre-assembled offer up the bumper to the car (2 people required) and make sure that the bumper edges do not contact the paintwork of the car.

If the edges of the tips of the quarter bumpers have an equal gap between them and the body work, then loosely fit the bumper to the car and tighten all mounting points equally and gradually whilst at all times checking for clearance.